

# Fobis Technologies Inc.

"designing gadgets for real life"

## Typical TV Setup 4 easy steps!

1

*Install batteries &  
remove the setup cover*

2

*Enter Favorite Channels*

3

*Enter your TV Brand*

4

*Secure battery &  
setup cover*

### BEFORE YOU BEGIN:

You need -  
**Two AAA Alkaline Batteries**  
and  
**A small Philips head screwdriver**  
to remove the battery door and  
protective setup cover

Remember to use the Battery Sticker located on the back of the battery door to store your TV Code and Set-Top code information. An extra sticker is included in this package.

**weemote® 3**  
**weemote® Sr.**  
**SETUP GUIDE**

# WELCOME

This Set-Up Guide is designed to get your weemote® programmed as quickly as possible. **In order to ensure a fast setup, please follow the Step-by-Step sections in this guide, in the order presented.** Doing so will save you from possible confusion and frustration later.

This guide is divided into two sections. The first section provides information in a Step-by-Step Quickstart format while the last section includes more detailed setup options and reference material.

As with any new sophisticated product like the weemote®, things are bound to come up which don't make it into our manual. If you run into trouble and can't find the answers in this manual, then please visit our web site at [www.weemote.com](http://www.weemote.com) for the latest updates and technical bulletins. **Please note that there is a troubleshooting section at the end of this guide.**

We welcome your feedback on our manual. If you have any suggestions, please email us at [info@fobis.com](mailto:info@fobis.com). If you are using the weemote® in a unique way, please let us know. We are always looking for ways to improve the product.

We also encourage you to register your weemote® so we can inform you of other cool gadgets we are working on. You can register on-line at our web site or fill out and mail the enclosed post card.


Enjoy your weemote®!

# TABLE OF CONTENTS

Welcome .....	3
Table of Contents	
How It Works .....	
STEP 1: Before You Begin	
STEP 2: What You Need	
STEP 3: Removing the Battery/Setup Covers	
STEP 4: Your Favorite Channels	
Entering Code/Channel Information	
STEP 5: Program Your Favorite Channels .....	
STEP 6: Setting your TV or TV/VCR Code	
STEP 7: Your Existing Remote Control	
STEP 8: Testng your TV Code	
STEP 9: Last Step for TV Users	
TV Codes	
TV/VCR Codes	
STEP 10: Setting your Set-Top Code	
STEP 11: Your Existing Remote Control	
STEP 12: Testng your Set-Top Code	
Cable Codes	
Satellite Codes	
DVR/TiVo Codes	
STEP 13: System Tweaks	
STEP 14: Finishing Up	
Setting the ENTER/OKAY Option	
Setting the 3-Digit Option	
Set-Top Power On/Off Option	
TV Startup Mode Options	
Adjusting Channel Changing Speed	
Channel Up/Down Options	
Disabling the Volume Control	
Powering up to a Favorite Channel	
Clearing Favorite Channels	
Clearing TV/Set-Top Codes	
Searching for your Code/Code Recall	
Complete System Reset	
Troubleshooting	
Care and Maintenance	
Warranty	

# HOW IT WORKS

## User Interface

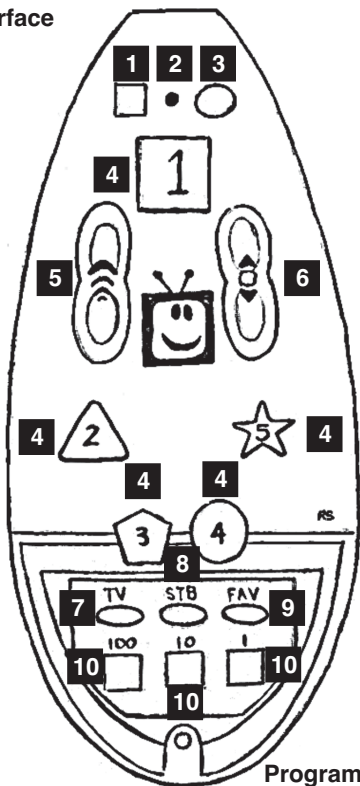

## Program Interface

- 1 Mute/Favorite Channel Button.** Normally set as a MUTE control but can be changed to be your 6th Favorite Channel.
- 2 LED Light.** Lights up whenever an active weemote button is pressed. Note that any selected Favorite channel button is not defined if pressed and the light does not go on brightly. Note that depending on how your weemote is configured, the LED light can stay on for a long time when the power button is pressed.

# HOW IT WORKS

- 3 Power Button.** This button automates the turning on of your entertainment system based on TV and Set-Top (if applicable) code information you provide as well as other options you can set. This button normally turns on both your TV and Set-Top box and sets the TV to channel 3. If you are using a Set-Top box, you can have the TV turned on to a different channel or video port by changing the "TV Startup Mode option" as described in this guide. You can also have the weemote set to go to the first favorite channel (Green #1 whenever you press the power button (Powering up to Favorite Channel Option). If you are using a Set-Top box, you can also set the weemote to not turn your Set-Top box on and off whenever the power button is pressed (Set-Top Power On/Off Option).
- 4 Favorite Channels 1-5.** Dedicated buttons that allow you to program channel numbers from 1 to 9999 . You must program a minimum of one channel for the weemote® to operate and you can program the same channel on multiple buttons. When you define a Set-Top code, the weemote automatically routes all channel changing commands to the Set-Top's tuner.
- 5 Volume Control.** This button is normally active but can be turned off in cases where you don't want the user to control the volume signal.
- 6 Channel Up/Down Control.** This button is factory set to only allow the favorite channels to be selected. In this mode, favorite channels 7-10 are only accessible from this button, if defined. There are two other optional settings available. You can either turn this control off altogether or allow it to select all available channels on your system (Adult Mode).
- 7 TV Button.** TV Programming Mode. This button allows you to program in the applicable code for your TV or TV/VCR unit.
- 8 STB Button.** Set-Top Programming Mode. This button allows you to program in the applicable code for your Set-Top device.
- 9 FAV Button.** Favorite Programming Mode. This button is used to allow you to program in your favorite channels.
- 10 100, 10 and 1 Buttons.** These buttons are used for entering in your actual code numbers or channel numbers. In favorite program mode, the top portion of the channel up/down button is used to enter in 1000 numbers (4-Digit Channels).

# STEP 1

## BEFORE YOU BEGIN

**1. If you have a cable-ready TV or TV/VCR.**  
COMPLETE Steps 1-9 in this guide

*Please note that the weemote® is already loaded with the most popular Sony TV code.*

**2. If you have a cable-ready TV connected to a Set-Top box.**

COMPLETE Steps 1-13 in this guide

Set-Top boxes are defined as cable TV boxes and satellite receivers such as DirecTV and Echostar. *Please note that we consider TiVo or Replay players as a Set-Top device in the weemote®.*

**3. If you only want to program your Set-Top box.**

COMPLETE Steps 1-5 and 10-13 in this guide

*Please note that if you only want all weemote® controls to be sent to the Set-Top box, you must clear the TV code already set in your weemote®. Please refer to the section called, "Clearing TV/Set-Top Codes"*

**NOTE:** The weemote® will not work if you are using a separate VCR's tuner as your method for changing channels on your TV. The weemote® will also not work with UHF (radio) based, long-range remote control systems. These systems allow you to control your Set-Top device without pointing the remote at the device or in another room.


## STEP 2

# REMOVING THE BATTERY AND SETUP COVER


Before you can program your weemote®, you must remove the setup cover.

Refer to the diagrams below and on the next page, figures A-D. Note that the screws are designed to remain on the covers so they don't get lost. Take care not to over tighten the screws when you put the covers back on.

**Make sure to use a small size Philips headed screwdriver or you will strip the screw heads.**

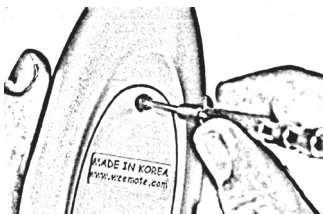

Removing the battery door  
Fig. A

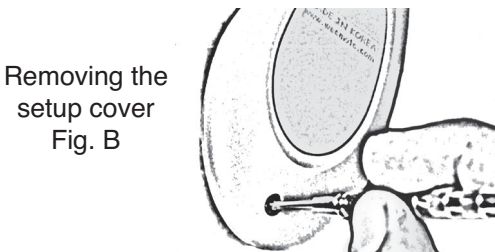

Removing the setup cover  
Fig. B



Pull down to remove setup cover  
Fig. C

## STEP 3

# LIST YOUR FAVORITE CHANNELS

You are only required to setup at least one channel. Note that Channel 1 can be set to go on whenever you press the RED power button. If you set channel 6, then you lose the MUTE control. Channels 7-10 can be set but will only be available from the channel up/down button.

<b>1</b>	_____	<b>6</b>	_____
<b>2</b>	_____	<b>7</b>	_____
<b>3</b>	_____	<b>8</b>	_____
<b>4</b>	_____	<b>9</b>	_____
<b>5</b>	_____	<b>10</b>	_____

### APPLICATION FOR EASIER MOVIE VIEWING WITH THE WEEMOTE®

In this application, you could program the normally used MUTE button to go to either channel 3 or 4, depending on which channel you use to output your VCR signal. Now the child can pop the tape into the VCR, hit the play button and then press the weemote's square gray button to ensure that the TV will display the movie from the VCR deck.

## TIP - ENTERING NUMBERS


Before you begin to program in your favorite channels or codes, here is a quick overview on the 100, 10 and 1 buttons. These buttons allow you to program in the channels and codes you will need to setup the weemote®. To support channels above 999, we have also provided a means to enter in channels in the thousands range - see note at the bottom of this page.

Depending on which number you need, you simply break down that number by 1000's, 100's, 10's and 1's. For example, channel 294 would be entered by pressing the 100 button twice (100 X 2), the 10 button nine times (10 X 9) and the 1 button four times (1 X 4). See diagram below.

And don't worry about zeros - the weemote® will add them in later. For example, if you need to enter channel 07 or 007 to get channel 7, just enter the number 7 (1 button seven times) and the weemote® will handle sending channel 07 or channel 007 if you need this option (3-Digit Option).

### **Example: To Enter Channel 294**

PRESS - # TIMES

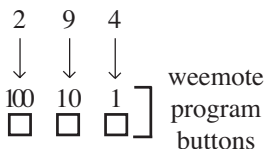

$$200 + 90 + 4 = 294$$

To enter in channel numbers in the thousands range, you would use the top portion of the channel up/down button to enter increments of 1000. This is covered in Step 4. For example, to enter in channel 8294, you would press the top portion of the channel up/down button 8 times (=8000), followed by entering the information shown in the diagram above.

## STEP 4

# PROGRAM YOUR FAVORITE CHANNELS

### ENTERING FAVORITE CHANNELS 1-5

1. Press and hold the "FAV" button for about three seconds until the LED light begins to flash, then release the button.
2. Press the favorite channel button you wish to program - in this example we are using the (Green) Button Number #1 to program in channel 296.
3. Press the following combination of the 100, 10 and 1 buttons to enter channel 296.
  - A. Press the "100" button X 2 times = 200
  - B. Press the "10" button X 9 times = 90
  - C. Press the "1" button X 6 times = 6

*\*If you need to enter a channel number in the thousands range, use the top portion of channel up/down button in this step to enter in each 1000 increment.*

4. Press the Favorite Channel (Green) Button #1 again to complete the sequence. **DO NOT PRESS THE FAV BUTTON.** Please check the LED - it should flash three times and then go out to confirm that the channel has been programmed. If it does not, start over again.

To setup favorite channels 2-5, simply use the steps above except that for Steps 2 and 4, you would substitute the Green Number 1 button for the other favorite channel button (2,3,4 or 5) you wish to program.

### TO ENTER IN A CHANNEL TO REPLACE THE MUTE BUTTON (CHANNEL 6):

1. Press and hold the "FAV" button for about three seconds until the LED light begins to flash, then release the button.
2. Press the MUTE button TWO TIMES.

## STEP 4

# PROGRAM YOUR FAVORITE CHANNELS

3. Press the combination of the Channel Up (1000), 100, 10 and 1 buttons required for the favorite channel number.
4. Press the MUTE button ONE TIME to complete the sequence. The LED should flash time times and go out to confirm the channel has been defined.

### TO ENTER IN FAVORITE CHANNELS 7-10:

1. Press and hold the "FAV" button for about three seconds until the LED light begins to flash, then release the button.
2. Press the MUTE button ONE TIME. The LED light should be on solid.
3. Press the favorite channel button for the channel number (7-10) you wish to program as shown in the table below.

For channel 7: Press Favorite Channel Button #2 - Blue

For channel 8: Press Favorite Channel Button #3 - Orange

For channel 9: Press Favorite Channel Button #4 - Rasberry

For channel 10: Press Favorite Channel Button #5 - Yellow

4. Press the combination of the Channel Up (1000), 100, 10 and 1 buttons required for your favorite channel number.
5. Press the Press Favorite Channel Button used above in Step 3 once to complete the sequence. The LED should flash time times and go out to confirm your entry.